

The *Coffeeduck Espresso cup* is a refillable cup for using loose espresso coffee in your Nespresso® coffee maker. This way, you can enjoy your favourite espresso blend in an economical and environmentally friendly way.

The *Coffeeduck Espresso cup* fits into the Nespresso® coffee maker and, provided you follow these instructions correctly, will result in a delicious cup of espresso with a frothy head. The espresso blend used **MUST** have a fine, evenly ground texture, i.e. the granules must all be of the same size. The ground coffee must also be roasted for espresso. We recommend talking to your coffee retailer about the best coffee to use. It takes a little practice to learn to fill the cups, but it's a skill that's easy to learn. Once you have gotten the hang of it after trying it a few times, you will be amazed by the results.

Before using the *Coffeeduck Espresso cup*:

- Check to make sure your Nespresso® coffee maker is clean and in good working condition.
- Clean the *Coffeeduck Espresso cup* with soap and water and dry it off thoroughly.
- If possible, store the espresso coffee in a shallow container to make it easier to fill the cup.

How to use the *Coffeeduck Espresso cup*:

- Scoop out the ground coffee with the cup and press the cup (using slight pressure) against the inside of the container to make sure it is filled completely. Alternatively, fill the cup using a teaspoon. Always fill it completely to the top edge.
- Push the ground coffee down into the cup.
Please note: pushing too hard can cause the ground coffee to become too compact, while pushing them too gently will result in an extremely weak cup of coffee. You will have to develop a feel for how much pressure is just right.
- Close the *Espresso cup*.
- Insert the cup into the Nespresso® and make sure the edge of the cover is pointing upward.
- Close the Nespresso® coffee maker.
- Press the 1-cup button and check to make sure the coffee is pouring out evenly.

After using the *Coffeeduck Espresso cup*:

- Open the coffee maker carefully (the cup may might stick a little; if so, simply push it downwards to loosen it).
- You can clean the cup immediately by rinsing it under the tap or remove the grounds later on using a teaspoon.
- Make sure the inside of the cover and the bottom of the cup (filter and holes) are cleaned properly and unblocked. If necessary, use a washing-up brush for extra cleaning.

Read these Instructions before use!

Coffeeduck Espresso-cup

fits Nespresso®

ENG

NOTE: NOT suitable for Nespresso®-Krupps coffee makers with 1 pin notches: F897, F896, F893 (all produced before 2003). Also not suitable for coffee makers with automatic capsules

Problem-solving:

Cup does not release after use.

1. The rim is not pointing upwards and/or the cup is new. The cup may shrink slightly at first and will fit better after being used a number of times. Release it by hand.

Cup is still hanging inside the shaft.

1. The coffee maker was opened too quickly. Do NOT try to close the machine at this point, as this will only damage the cup. Loosen the cup carefully by hand.

Weak espresso.

1. Too little ground espresso coffee in the cup. Make sure the cup is always filled to the rim. If the cup is not completely full, the water will not flow through the ground coffee properly, resulting in weak coffee.
2. The coffee used was too coarsely ground. Only finely ground espresso may be used.
3. You selected the wrong amount of water, one that is not suitable for Lungo.

Coffee does not flow out and machine switches itself off.

1. The ground coffee used was not evenly ground and/or it was pressed down too hard. The machine always switches off automatically if the ground espresso coffee is not evenly fine because the smallest granules accumulate in front of the filter, blocking the flow of water.

Tips

- Also try using powdered chocolate, loose leaf tea or instant coffee in the *Coffeeduck Espresso cup*.
- Try making a ristretto using a shorter brew time. **HIGHLY RECOMMENDED!**

More info: www.coffeeduck.com
Patent pending

The Coffeeduck Company hopes you enjoy your purchase!