

The *Coffeeduck* lets you change your Senseo into an espresso coffee maker. The *Coffeeduck* is a 2-pod holder that is also suitable for ground coffee. You'll be amazed by its versatility!

The Senseo works on the 'espresso system' principle, which is widely used in hotels and restaurants. The coffee in the paper pods is finely ground and often roasted for longer. So for the best results, you should use fine-ground coffee in the *Coffeeduck*, preferably an espresso grade. If you use medium-ground to coarse-ground coffee, your coffee will have less aroma and taste. When using the *Coffeeduck*, you may find that less foam forms on your coffee than with paper pods.

Before using the *Coffeeduck*:

- Make sure your Senseo is clean and in good working order and check that the *Coffeeduck* fits properly.
- Clean the *Coffeeduck* with soap and water and dry it off thoroughly.

How to use the *Coffeeduck*:

- Fill the *Coffeeduck* with coffee, preferably finely ground or espresso grade.
 - If you use a fast-brew filter grade or coarsely ground coffee, always fill the *Coffeeduck* completely (up to 4 mm below the top rim).
 - If you use a finely ground or espresso grade coffee, fill the *Coffeeduck* from half to completely full (up to 4 mm below the top rim) for the taste you prefer.Please note: you must clean any stray coffee grounds off the top flange or rim!
- Place the aroma filter on the clean top rim. If you have a *Coffeeduck* latte or new generation, place the aroma filter so that the lip is at the front of the machine.
- Close the Senseo.
- Press the 1-cup or 2-cup button.

After using the *Coffeeduck*:

- Open your Senseo coffee maker.
- Remove the *Coffeeduck* from the coffee maker.
- Remove the aroma filter. If you have a *Coffeeduck* new generation or latte, you can just press down on the lip of the filter to tilt it up.
- Tap the *Coffeeduck* to remove the coffee grounds and/or rinse it clean under the tap.
- Dry the *Coffeeduck* in preparation for the next time you want to use it.

Read these instructions before use!

Coffeeduck classic

suitable for HD7810 to HD7812 inclusive

Coffeeduck new generation

suitable for HD7820 to HD7824 inclusive, HD7830, HD7841, HD7842

Coffeeduck latte

suitable for HD7850

ENG

Solving possible problems in use:

Is your coffee too weak?

1. Not enough coffee in the *Coffeeduck*.
2. Not enough or too coarse a grade of coffee in the *Coffeeduck* (use a finer grind like espresso grade).
3. The coffee is too old, always use fresh coffee.

Does your coffee maker leak?

1. The aroma filter has been placed incorrectly on the top rim.
2. You have put too much coffee in the *Coffeeduck*.
3. There are stray grounds on the top rim or flange of the *Coffeeduck*, always clean the rim to remove all traces of coffee.
4. There are coffee grounds in the Senseo's rubber lid seal (clean this rubber seal carefully with a wet cloth).

Grounds in the coffee?

1. Hasty filling or removal of the *Coffeeduck* have led to coffee grounds getting into the Senseo coffee maker. Clean the coffee maker carefully.
2. You have forgotten to place the aroma filter on the *Coffeeduck*.

Not much (but really strong) coffee in a single cup serving?

1. You are pressing the coffee down too hard and preventing proper percolation.

Tips

- You can also fill the *Coffeeduck* when it is in place in the Senseo coffee maker.
- The *Coffeeduck* is highly versatile, it will also accept 2 paper pods (without the aroma filter).
- There is a *Coffeeduck* for all Senseo models.
- You can clean the *Coffeeduck* in the dishwasher.

Coffeeduck® is patented by:
The Coffeeduck Company

More info: www.coffeeduck.com

The Coffeeduck Company hopes you enjoy your purchase!